

AT Command Usage

Commands are case sensitive and should end with /r/n

Commands may use 1 or more of these types

Set = AT+<x>=<...> - Sets the value

Inquiry = AT+<x>? - See what the value is set at

Test = AT+<x>=? - See the possible options

Execute = AT+<x> - Execute a command

Commands with * have been depreciated in favor of COMMAND_CUR and COMMAND_DEF.

CUR will not write the value to flash,

DEF will write the value to flash and be used as the default in the future.

AT Command List

AT - Attention

AT+RST - Reset the board

AT+GMR - Firmware version

AT+CWMODE* - Operating Mode

1. Client

2. Access Point

3. Client and Access Point

AT+CWJAP*=<ssid>,<pwd> - Join network

AT+CWLAP - View available networks

AT+CWQAP - Disconnect from network

AT+CWSAP*=<ssid>,<pwd><chl><ecn> - Set up access point

0. Open. No security

1. WEP

2. WPA_PSK

3. WPA2_PSK

4. WPA_WPA2_PSK

AT+CWLIF - Show assigned IP addresses as access point

AT+CIPSTATUS - Show current status as socket client or server

AT+CIPSTART=<type>,<addr>,<port> - Connect to socket server

IP is fixed at 192.168.4.1, mask is fixed at 255.255.255.0

if CIPMUX is set to multichannel add <id> to beginning of string

AT+CIPCLOSE - Close socket connection

AT+CIFSR - Show assigned IP address when connected to network

AT+CIPMUX=<mode> - Set connection

0. Single Connection

1. Multi-Channel Connection

AT+CIPSERVER=<mode>[,<port>](AT+CIPMUX=1) - Default port is 333

0. Close the Socket Server

1. Open the Socket Server

AT+CIPMODE=<mode> - Set transparent mode

Data received will be sent to serial port as

0. +IPD,<connection channel>,<length>format (AT+CIPMUX=[0,1])

1. Data stream (AT+CIPMUX=0)

AT+CIPSTO=<time> - Set auto socket client disconnect timeout
from 1-28800s

Example Commands

AT+CWMODE=? //View options for mode (test)

AT+CWMODE=3 //Set mode to client and access modes (set)

AT+CWLAP //View available networks (execute)

AT+CWJAP = "ssid", "password" //Join network (set)

AT+CWJAP? //View the current network (inquiry)

AT+CIFSR //Show IP address (execute)

AT+CWQAP //Disconnect from network (execute)

AT+CWSAP="apoint", "pass", 11, 0 //Setup an open access point (set)

AT+CWLIF //Show devices connected to access point