

18180-MI



TO PROGRAM

NOTE: "PRESS" means to Activate & Release the Button

- 1: Press "**ON/OFF/ENTER**" Button
 - 1.1: Last Message played or "AAA" will scroll.
- 2: Press "**PU**" button
 - A number 1-6 will appear in the Right hand position
 - #1. This is the present Message number
 - 2.1: Continue pressing "**PU**" Button until desired Message # appears.
- 3: Press "**ENTER**" Button, An "**A**" will appear in the far right position #1. This denotes All Caps mode.
 - 3.1: Press "**CONVERSION**" Button to select Style
 - "**A**" All Caps/
 - "**a**" Lower Case & Numbers/
 - "**[**" Symbols (including blank Space) (Style may be changed for each Letter/Symbol in Message by pressing "CONVERSION" Button)
- 4: Press "**PU**" or "**PD**" to locate desired character. This will be shown in Position #1
- 5: Press "**ENTER**" Button to store character.
 - Character will appear in the #2 position on screen.
 - 5.1: If you press "ENTER" at the incorrect character or Letter immediately Press "**REWORK**" Button and then select the correct entry, then press "**ENTER**"
- 6: Repeat as needed to load message.
- 7: After last letter; do not press "ENTER" wait 12 Seconds. Message will begin to scroll.

NOTE: When you elect to change a message, the existing Message is Erased

TO PLAY

NOTE: "PRESS" means to Activate & Release the Button

- 1: Press "**ON/OFF/ENTER**" Button
 - 1.1: Last message played will start or "AAA" will scroll.
- 2: Press "**PU**" button
 - A number 1-6 will appear in the Right hand position
 - #1. This is the message number
 - 2.1: Continue pressing "**PU**" Button until desired Message # appears.
- 3: Wait 12 Seconds Message will begin to scroll.

TO PLAY DIFFERENT MESSAGE

- 1: Press "**PU**" Button at any time during Scrolling and the current message # will appear. Continue pressing "**PU**" Button until desired message # is shown.
- 2: Wait 12 Seconds, Selected Message will begin to scroll