


NOTE:
 1: For 5VDC use only:
 Connect Jumper W1 and Supply +5V to VSS Terminal
 2: For up to 14VDC MOTOR INPUT:
 Remove Jumper W1 and Supply up to 14VDC to VS (V Motor) Terminal

www.mpja.com		
Title		
L298 STEPPER MOTOR DRIVER 31595MP		
Size	Document Number	Rev
A	Marlin P. Jones & Assoc, Inc	
Date:	Friday, August 01, 2014	Sheet 1 of 1

LOGIC INPUT
CONTROL

ENA
IN1
IN2
IN3
IN4
ENB

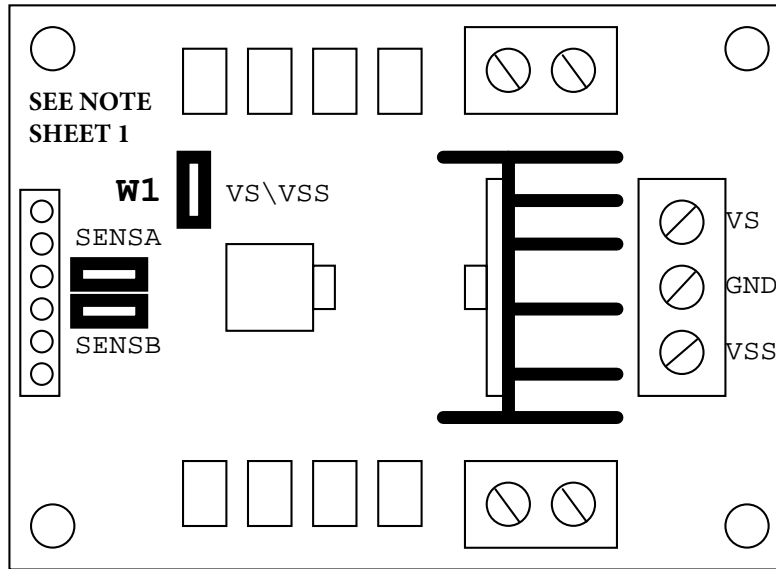

TOP VIEW

MOTOR
OUT1
OUT2

OUT4
OUT5
MOTOR

POWER SUPPLY

SEE NOTE
on SHEET 1

www.mpja.com		
Title L298 STEPPER MOTOR DRIVER 31595MP		
Size A	Document Number Marlin P. Jones & Assoc, Inc	Rev
Date: Friday, August 01, 2014	Sheet 1	of 1