



ITEM/ARTICLE/ARTÍCULO
#283520

 
LINE VOLTAGE LED LIGHT
LUMIÈRE À DIODES ÉLECTROLUMINESCENTES À
TENSION COMPOSÉE (Page 4)
LUZ LED DE VOLTAJE DE LINEA (Página 8)

MODEL/MODÈLE/MODELO #GU0018P-LED1

Questions, problems, missing parts? Before returning to your retailer, visit our website at www.goodearthlighting.com/support.html or contact our customer service department at 1-800-291-8838, 8 a.m.-5 p.m., CST, Monday-Friday.

PACKAGE CONTENTS

| Part | Description | Quantity |
|------|---------------|----------|
| A | Fixture | 1 |
| B | Inline Switch | 1 |
| C | Wall Screws | 2 |

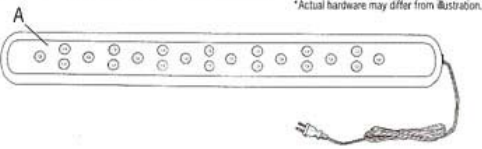

WARNINGS AND CAUTIONS

- WARNING**
- Shut off power at the circuit breaker or fuse panel before removing the old fixture.
- CAUTION**
- DO NOT USE THIS FIXTURE WITH A DIMMING CIRCUIT.** If you presently have dimmer controls, you will need to remove them, and replace them with regular electrical switches. If you have a three way dimmer, you will have to replace it with a regular three way switch. If you are unfamiliar with electrical installations, we recommend you have a qualified electrician do your installation.

PREPARATION

Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Estimated Assembly Time: 15 minutes
Tools Required for Assembly
Flathead Screwdriver Phillips Screwdriver Safety Glasses
Drill Drill Bit 1/16 in. Pliers

PREPARATION

Your L.E.D. light heads use light emitting diodes to provide light. L.E.D.'s are electronic semiconductors, and do not have a filament that can burn out like an ordinary light bulb. As such, your L.E.D. light heads can last up to 20,000 hours when used intermittently, and therefore, never need replacing.

We recommend you read through the instructions entirely before starting your installation in order to help you understand all the steps and options regarding your particular installation.

IMPORTANT SAFETY INSTRUCTIONS

Never use with an extension cord unless plug can be fully inserted. Do NOT attempt to defeat this feature.

 
 
 
WARNING: To reduce the risk of FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- Use only insulated staples or plastic ties to secure the cords.
- Route and secure the cords so that they will not be pinched or damaged when cabinet is pushed to the wall.
- Do not use an extension cord. Use power strip with integral overcurrent protection to supply other electrical devices or accessories in cabinet.
- Not intended for illumination of aquariums.
- Not intended for recessed installation in ceilings, or soffits.
- Do NOT attempt to install while plugged in.
- For **INDOOR USE ONLY**.
- Do NOT mount the LED lights to cabinets having a material thickness less than 1/4 in.
- Do NOT install these lights inside of enclosed cabinets.
- Do NOT mount over sinks or stoves.


SAVE THESE INSTRUCTIONS IN A LOCATION CLOSE TO YOUR LIGHT FIXTURE SO YOU CAN REFER TO THEM AT A LATER TIME.

MOUNTING INSTRUCTIONS

- Mark the general area where you want to install the light bar (A). The installation screw holes must be at least 2 in. away from the (front) inside edge of your cabinets. Locate the mounting keyhole slots on the back of the fixture. Measure from the center-to-center distance to determine the distance the mounting screws need to be installed. Measure and mark the corresponding placement on the mounting surface (Fig. 1). **NOTE:** Make sure your mounting location is within 5 ft. of an electrical outlet. Verify this before you drill your screw holes into the cabinets.
- Using a small drill or nail, make two small starter holes at the marked locations. Screw in the two #8 mounting screws (C) until they contact the bottom surface of the cabinet (Fig. 2). The screws must be driven in straight for the light bar to mount properly.
- Position the LED bar over the mounting screw heads (Fig. 3). Slide the bar over so the mounting screw heads engage the narrow section of the keyhole slots. If the LED bar still seems loose, remove the LED bar and tighten the mounting screws another 1/4 turn.

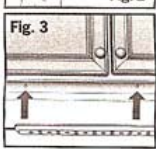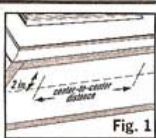

 - Put the other half of the switch body back on, and squeeze the two halves together so the contact pins inside the switch pierce the insulation on the cut wire. Replace the attachment screw and nut, and tighten the switch body back together (Fig. 4).
- Route your cord to the nearest outlet, and plug in.



CARE AND MAINTENANCE

Your fixture is made from quality materials that will last for many, many years with minimum care. You may want to periodically clean the fixture using a mild, non-abrasive glass cleaner and soft cloth. Do NOT use solvents or cleaners containing abrasive agents. When cleaning the fixture, make sure you have the power turned off and do not spray liquid cleaner directly onto the bulb, socket, ballast, or wiring.

TROUBLESHOOTING

Minor problems often can be fixed without the help of an electrician. Before doing any work on the fixture, shut off power supply at the circuit breaker panel to avoid electrical shock.

| Problem | Cause | Solution |
|-----------------------|--------------|-----------------------------|
| Fixture doesn't light | Power is off | Check if power supply is on |
| | Bad switch | Test or replace switch |

REPLACEMENT PARTS LIST

Keep this guide handy for ordering replacement parts.
Hardware Kit HDW0018D

NEED HELP?

In the event you are missing a part or have questions regarding installation please visit our website at www.goodearthlighting.com/support.html or call the Customer Care Center 1-800-291-8838.

UTILITECH™ LIGHTING WARRANTY

1-YEAR

Good Earth Lighting® warrants this lighting fixture to be free from defects in materials and workmanship for a period of (1) year from the date of original purchase by the consumer. We will repair or replace (at our option) the unit in the original color, and style if available, or in a similar color and style if the original item has been discontinued, without charge, exclusive of bulbs. Defective units must be properly packed and returned to Good Earth Lighting® with a letter of explanation and your original purchase receipt showing date of purchase. **Call us at 1-800-291-8838** to obtain a Return Authorization number and an address where to ship your defective product. Note: No C.O.D. shipments will be accepted. The liability of Good Earth Lighting® is in any case limited to replacement of the defective light fixture product. Good Earth Lighting® will not be liable for any other loss, damage, or injury which is caused by the product. This limitation upon the liability of Good Earth Lighting includes any loss, damage, or injury which is (I) to person or property or otherwise; (II) incidental or consequential in nature; (III) based upon theories of warranty, contract, negligence, strict liability, tort, or otherwise; or (IV) directly, or indirectly related to the sale, use, or repair of the product. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Printed in China
Distributed by: Good Earth Lighting, Inc., 5260 Capitol Drive, Wheeling, IL 60090

SWITCH INSTALLATION

- Install the cord switch (B) in a convenient, easy-to-reach location on the line cord. Loosen the screw on the switch body, and separate the halves of the switch body (Fig. 1). Make sure not to lose the screw and small nut.
- You will notice that your line cord has one side that is ribbed, and one side that is smooth. The ribbed side is the polarized side of the wire. Cut through the smooth non-ribbed side of the line cord (Fig. 2). **CAUTION:** Do NOT cut or damage the insulation on the continuous side of the wire. In the area of the line cord where the switch is to be placed, cut and remove a 5/8 in. piece of the cord as shown.
- Place the cord in the hollow half of the switch body as shown. Make sure that the cut sections of the wire do not touch each other (Fig. 3).

