

32934-MP

Mini Thermostat

Compact digital thermostat with isolated relay output and Dual 3 digit 0.28" LED displays.

Features:

C/F Display Selection, Programmable set Point, Cool or Heat control, Hysteresis, Start Delay and High Temp. Alarm.

Control Range: -50 to +110 "C"/-58 to +220 deg. "F"

Dual Display: Ambient Temp. and Set Point Temp.
Front Panel Selection of "F" or "C"

Power: 12VDC

Current: ~65mA Relay energized

Refresh rate: 0.5sec.

Resolution: 0.1deg. from -9.99 to +99.9

1.0deg. for above 100deg. C

Accuracy: Measurement : 0.1deg.

Control: 0.1deg.

Relay: SPST-NO 20A/14VDC; 5A/125VAC

Sensor: NTC waterproof probe (12in. leads)

Temp. Range: -10 to 60deg. "C"; 20-85% humidity

Terminal Strip for Power & Relay contacts.

Cutout: W: 46mm H: 27mm

W: 1-7/8" H: 1-1/8" D: 1-3/8" WT: .06

Operation:

READ "Parameter" setting on Page 2 to determine if any changes are needed

Error Indications

Display Shows "LLL" Probe is open, Beeper will pulse

Display Shows "HHH" Probe is Shorted, Beeper will pulse

1: Place Controller in desired location along with the probe

2: Connect Load to Controller Relay Contacts (Be sure Load power is off)

3: Connect 12VDC Power Supply to Controller

(Display will show ambient temperature at Probe location and present temperature setting)

4: Press C/F Button as needed to select scale

4.1 Press SET button momentarily and the Lower Display will flash

4.2 Press the SET (+) or C/F (-) buttons to set the desired temperature and "Beep" will sound

4.3 Wait ~3 seconds to store setting & Exit

RELAY ENERGIZED LED Lights when SET POINT Is Reached in Either COOL or HEAT Mode

NOTE: Under Alarm Condition: Beeper will sound and Display will show "---"

Alarm will Stop when Temperature drops below High Alarm setting


There is No Manual Silence for the Alarm

You can remove Power

Reset to Factory Defaults (Press & Hold SET & C/F)

This will set the Alarm to "OFF"

You will have to re-enter all Parameters for all Modes

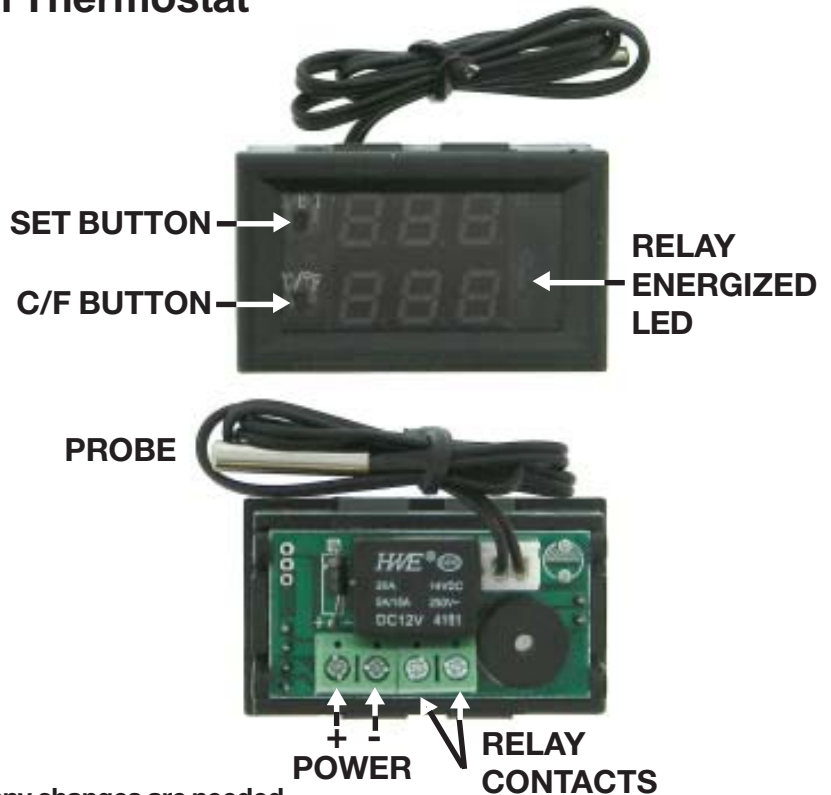

Information obtained from or supplied by Mpja.com or Marlin P. Jones and Associates inc. is supplied as a service to our customers and accuracy is not guaranteed nor is it definitive of any particular part or manufacturer. Use of information and suitability for any application is at users own discretion and user assumes all risk.



MARLIN P. JONES & ASSOC., INC.

P.O. Box 530400 Lake Park, FL 33403

800-652-6733 FAX 561-844-8764

WWW.MPJA.COM

32934-MP

Mini Thermostat

Parameter Chart:

Mode	Function	Range	Default	
P0	Cool/Heat	C or H	C	<u>Sets Relay Function Energized for Cool or Energized for Heat</u>
P1	Hysteresis	0.1-30deg.	2	Sets the the span between ON/OFF
P2	High Set Limit	-50 to 110deg	110deg	Set Max Allowed Temperature Setting
P3	Low Set Limit	-50 to 110deg	-50deg	Set Min Allowed Temperature Setting
P4	Correction	-15 to +15deg.	0	Set Offset due to special circumstances
P5	Start Delay	0-10sec.	0	Sets the Delay time after Set temp. is reached before relay is On
P6	High Alarm	ON/OFF	OFF	Turn ON/OFF & Set Heat Alarm Point (SEE NOTE Pg 1)
P7	Display	C or F	C	Set degree scale Centigrade/Farenheit
P8	Reset	ON/OFF	OFF	Resets ALL parameters to Factory Default

Setting Parameters:

If no changes are made during any setting mode, unit will automatically return to normal operation after ~3sec.

Beeper will sound when you make any selection

1: Press & Hold SET Button for >3 seconds to enter Menu

Upper Display will Show Parameter starting with P0

Lower Displays present setting

1.1: Press the SET or C/F Button to sequence through the Setup P0-P8

1.1.1: After selection, Short press of Both SET & C/F to show present setting on Lower Display

1.1.2: Press SET or C/F to to adjust the settings

1.1.3: Wait for ~3 seconds for automatic store & return to normal display

1.2: Repeat 1.1 steps to set other Parameters P0-P5

1.3: Setting P6 Alarm Set Point

1.3.1 Follow Step 1.1 to select P6

Lower Display shows "ON" or "OFF" (Depends on last setting)

1.3.2 Press Both SET & C/F for >3 seconds

1.3.3 Use SET to Turn ON Alarm function

Use C/F to Turn OFF Alarm function

1.3.4 Press Both SET & C/F for >3 seconds

Lower Display will show Alarm temperature setting

1.3.4 Use SET to Increase setting

Use C/F to Decrease setting

1.3.5 Wait for ~3 seconds for automatic store & return to normal display

1.4: Setting P7 Redundant feature of selecting C or F temperature Scale

1.4.1: Follow Step 1.1 to select P7

Lower Display shows "CS" or "FH" (Depends on last setting)

1.4.3: Short press of Both SET & C/F show present setting on Lower Display (CS or FH)

1.4.4: Press SET for degrees "C"

Press C/F for degrees "F"

1.4.5: Wait for ~3 seconds for automatic store & return to normal display

1.5: P8 System Reset to factory Default Settings

1.5.1: Follow Step 1.1 to select P8

1.5.2: Short press of Both SET & C/F show OFF setting on Lower Display

1.5.3: Press SET for ON, THIS will imeadately reset all parameters Displays will not change from P8/ON

1.5.4: Wait for ~3 seconds for automatic return to normal display

NOTE: Reset can be accomplished in the Normal display mode by pressing Both SET & C/F

Displays will Flash & Display 888 for ~10 seconds then return to Normal display