



# 34108-MD

## GENERAL INFORMATION

Figure1  
Input & Control Locations

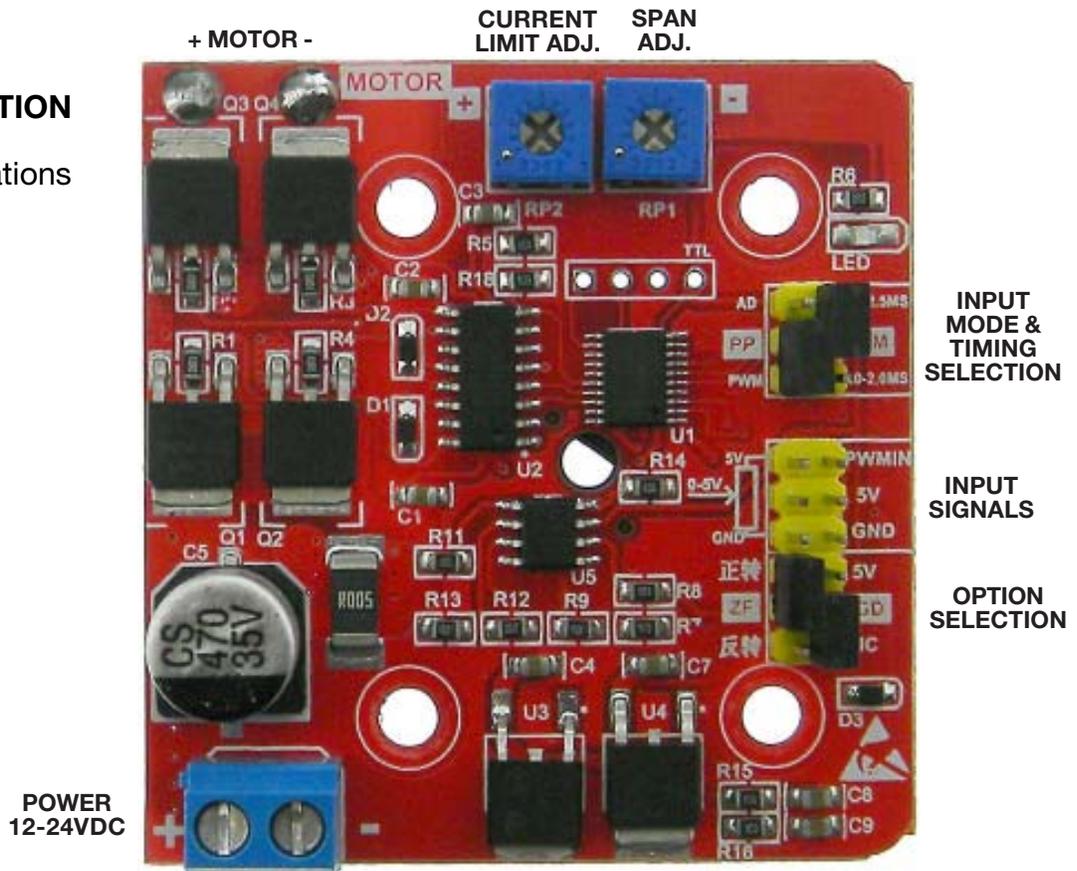


FIGURE 1

**Power Connection:** 12-24V DC power supply, it is recommended to use a 10A power supply.

## CURRENT & SPAN ADJUST

Figure2:

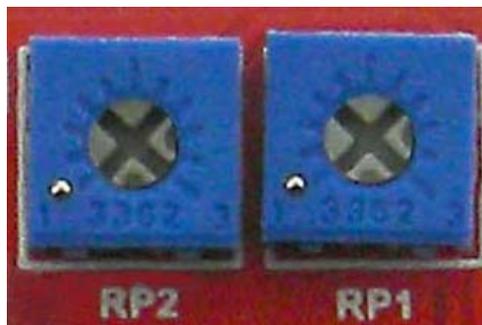


FIGURE 2

1. Current Limit Adjust Control RP2: Sets the Max. output current available to motor:  
As the mechanical load increases or a jam occurs, the drive current will increase.  
To prevent damage to load or motor; Set the Current limit to shut down the motor.  
Clockwise: Increase the current limit  
Counter clockwise: Lower the current limit
2. Span Adjustment Control RP1: Clockwise: Bi-directional angle increases, Counter clockwise the angle decreases  
Max: 300° (+-150°)

# 34108-MD

## ANALOG & DIGITAL INPUT Figure 3

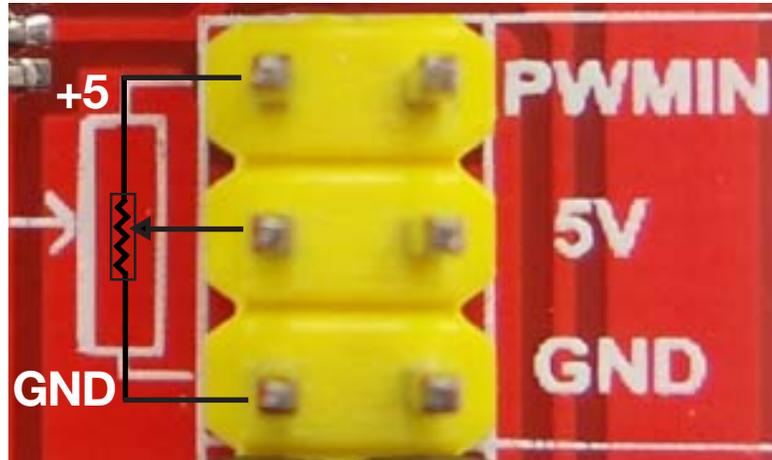


FIGURE 3

1. The three-pin header with a potentiometer symbol (on the left above) is the Analog input signal using an external potentiometer, 10KOhm or greater. NOTE the Connections )  
0 R (ohms) = 0°   1/2R = Neutral (1/2 Span)   1R (max ohms) = Full Span
2. The 3 pin header labeled "PWMIN" (on the right above) is the input from servo driver (receiver, controller)  
Period 20MS, 50HZ,  
Selectable pulse width see **Figure 4**  
1-2ms pulse range  
0.5-2.5ms pulse range  
If generating your own signal pulse train, be sure that it is within these parameters.  
As long as the signal will control a standard servo it will work.

## ANALOG OR DIGITAL INPUT SELECT PULSE WIDTH SELECT Figure 4

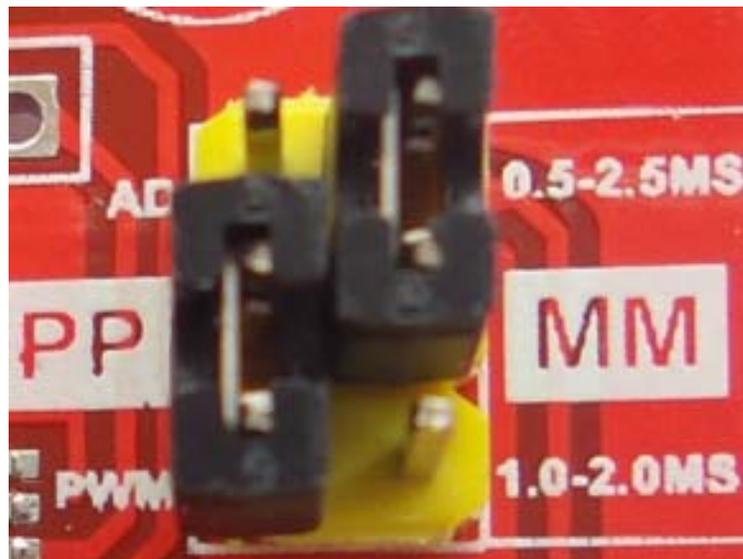


FIGURE 4

1. The three-pin header labeled "PP" (on the left above) selects either the Analog or the Digital (PWM) input for control
2. The 3 pin header labeled "MM" (on the right above) selects either:  
1-2ms PWM pulse width range  
0.5-2.5ms PWM pulse range

# 34108-MD

## SERVO PWM TIMING



1. Servos are controlled by a pulse of variable width. The control pin is used to receive this pulse. The parameters for this pulse are: a minimum pulse width, a maximum pulse width, and a repetition rate. The neutral position is the place where the servo has the same amount of rotational range in both the clockwise and the counter clockwise direction (Span)

Note that different servos will have different constraints on their rotation but they all have a neutral position, and that position is always around 1.5 milliseconds (ms).

To hold a position; the pulse must be repeated ~ every 20ms

~1ms = 0°

~1.5ms = 1/2 Span

~2.0ms = Full Rotation

## REVERSING & INTERFACE POWER

Figure 5



FIGURE 5

1. The three-pin “ZF” header (on the left above ) is used to switch the forward and reverse rotation of the DC Motor without having to dismount the servo or unsolder the Motor leads from the board.

2. The three-pin “GD” header (on the right above) is used to control the voltage of the “PWMIN” signal interface.

Looking at **Figure 3**, the “PWMIN” interface has three pins, one is labeled “5V”

Now looking at **Figure 5**,

When the center “GD” pin is jumpered to the “5V” pin.

This connects 5VDC power to the “5V” pin on the “PWMIN” header (**Figure 3**)

When center “GD” pin is jumpered to the “NC” pin, the “5V” pin on the “PWMIN” header (**Figure 3**) is floating.

The purpose of this design is if your Servo controller is 5V powered; such as model aircraft receiver, then you can directly use the “5V” PWMIN header signal line with the “GD” pin jumpered to “5V” pin. If your controller supply voltage is more than 5V, you will need a separate power supply, You then jumper the “GD” pin to the “NC” header pin to avoid damage to the Servo