

NOTE:

1: For External Enables:
Remove Jumpers from ENA & ENB on Header and connect external signal to ENA & ENB Pins

2: For 5VDC Motor & Logic power only:
Connect Jumper **J-1** and Supply +5V to +5V Terminal on TS-1

3: For 7V to 14VDC Motor Power:
Remove Jumper **J-1** and Supply up to 14VDC to +12V Terminal on TS-1

Information obtained from or supplied by Mpja.com or Marlin P. Jones and Associates inc. is supplied as a service to our customers and accuracy is not guaranteed nor is it definitive of any particular part or manufacturer. Use of information and suitability for any application is at users own discretion and user assumes all risk.

www.mpja.com


Title MOTOR DRIVER L298N		
Size	Document Number 34652-MP	Rev.
Date	Sheet 1 of 2	

NOTE:

1: For External Enables:
Remove Jumpers from ENA & ENB on Header
and connect external signal to ENA & ENB Pins

2: For 5VDC Motor & Logic power only:
Connect Jumper **J-1** and Supply +5V
to +5V Terminal on TS-1

3: For 7V to 14VDC Motor Power:
Remove Jumper **J-1** and Supply up to
14VDC to +12V Terminal on TS-1

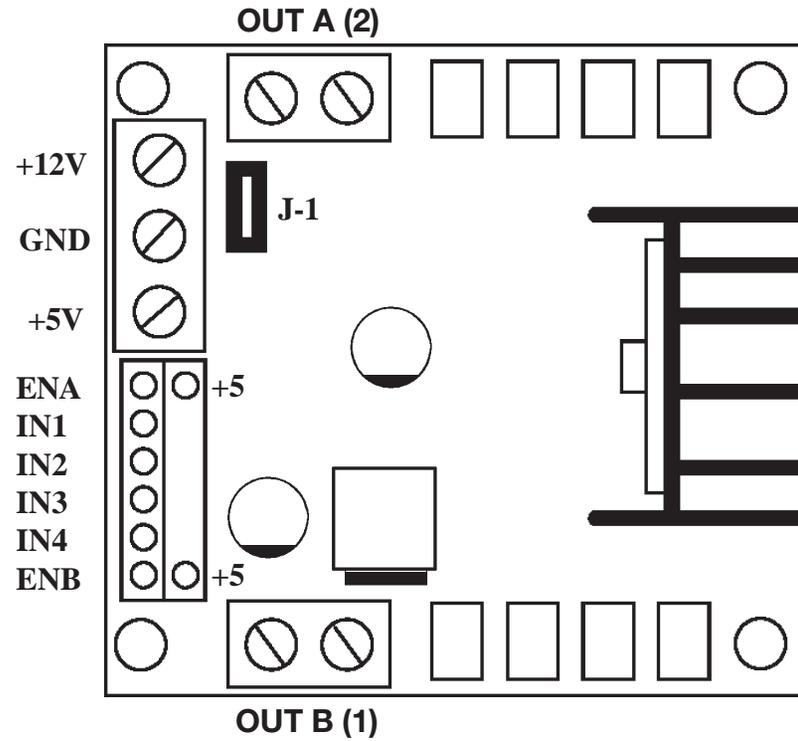

Information obtained from or supplied by Mpja.com or Marlin P. Jones and Associates inc. is supplied as a service to our customers and accuracy is not guaranteed nor is it definitive of any particular part or manufacturer. Use of information and suitability for any application is at users own discretion and user assumes all risk.

www.mpja.com

Title MOTOR DRIVER L298N		
Size	Document Number 34652-MP	Rev.
Date	Sheet 2 of 2	