

34666-ME

Humidity Sensor & Controller

Compact humidity sensor and controller module can be used to control humidity from 00% -99% RH using an external humidifier or dehumidifier.

Display: 3 Digit Red LED

Power: 12VDC

Range: 0-99% RH

Accuracy: +-5% 40-80% RH

Adjustment: 0.1%


Relay: SPST

Contacts: 10A@ 250/125VAC/30VDC

Relay Activated LED

Terminal Strips for Power & Relay Contact

L: 2-5/16" W: 1-9/16" H: 7/8" WT: .06

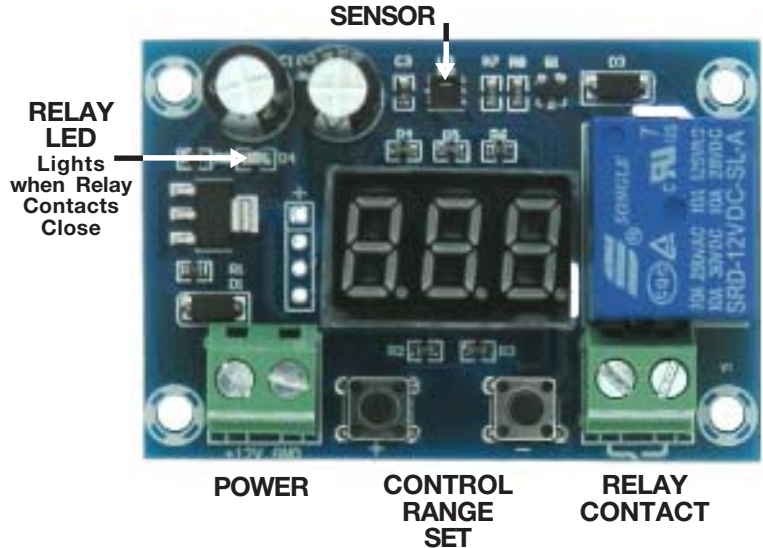

SETTING RANGE:

When power applied (12vdc) the unit will display ambient humidity by onboard sensor.

Using a Humidifer:

The "Start" setting is lower than "Stop" setting

1. Set the start humidity value (relay on) press and hold the "+" button until the display flashes.
Use the "+" and "-" buttons to increase or decrease by .1% the start point.
Release and after a few seconds the unit will revert to display actual humidity.

2. Set the stop humidity value (relay off) and hold the "-" button until the display flashes.
Use the "+" and "-" buttons to increase or decrease by .1% the stop point.
Release and after a few seconds the unit will revert to display actual humidity.

Using a Dehumidifer:

The "Start" setting is higher than "Stop" setting

Follow the same procedure as above

Information obtained from or supplied by Mpja.com or Marlin P. Jones and Associates inc. is supplied as a service to our customers and accuracy is not guaranteed nor is it definitive of any particular part or manufacturer. Use of information and suitability for any application is at users own discretion and user assumes all risk.



MARLIN P. JONES & ASSOC., INC.

P.O. Box 530400 Lake Park, FL 33403

800-652-6733 FAX 561-844-8764

WWW.MPJA.COM