

36389-MD

500W PWM Speed Control DC Speed Control

Snap-in, High-power PWM DC motor speed control with front panel output ON/OFF control
Soft Start, Adjustable Duty Cycle & Frequency.
Retains all function settings with power off.

Input: 9V-60VDC

Rated Current: 12A (20A Peak)

Power: 1500W(Max)

Duty Cycle: 0%-100%

Duty Cycle Resolution: 1%

Frequency: 1KHz-99KHz

Frequency Accuracy: 1%

Frequency Resolution: 1KHz

Cutout: 77mm x 40mm

W: 79mm **H:** 43mm **D:** 40mm **WT:** .14

OUTPUT
Lit: ON
Dark: OFF




DIGITAL POT

CONNECTION DIAGRAM

NOTE This Pad is Internally Connected to Power -

EXTERNAL OUTPUT "ON/OFF" SWITCH (SPST-NO)

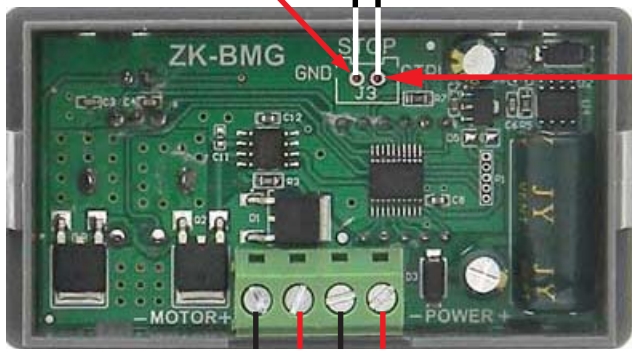

"STOP" Pads:
Used to connect a remote SPST-NO Momentary Pushbutton Switch to turn Output ON/OFF(Alternates each press).

MOTOR - + - + POWER

NOTE Motor + and Power + Connected Internally

Information including Drawings, Schematics, Links and Code (Software) Supplied or Referenced in this Document is supplied by MPJA inc. as a service to our customers and accuracy or usefulness is not guaranteed nor is it an Endorsement of any particular part, supplier or manufacturer. Use of information and suitability for any application is at users own discretion and user assumes all risk.

Information Subject to Change Without Notice
All rights are retained by the respective Owners/Author(s)



MARLIN P. JONES & ASSOC., INC.

P.O. Box 530400 Lake Park, FL 33403
800-652-6733 FAX 561-844-8764
WWW.MPJA.COM

36389-MD

500W PWM Speed Control DC Speed Control

SETUP

GENERAL

- 1: Short Press: Momentary (Press & Release)
- 2: Long Press: Press & Hold until Display Changes (~10sec. Release after)

NOTE: Normal Display default is **Duty Cycle**

- 3: Connect Power (BE SURE OF CORRECT POLARITY)

NOTE: DO NOT CONNECT LOAD UNTIL SETUP IS FINISHED

- 4: Normal Mode: (Duty Cycle "Speed" Adjust)

- 4.1: Short press Digital Pot: Turn Output ON/OFF (Alternate Action)
- 4.2: Increase Duty Cycle: Rotate Digital Pot clockwise:
- 4.3: Decrease Duty Cycle: Rotate Digital Pot counterclockwise



EXAMPLE 1



EXAMPLE 2

- 5: Limit (Parameter) Set Mode: Long press Digital Pot to select the Parameter Set Mode.

- 5.1: Short press Digital Pot to scroll through parameters:

Default Output (ON/OFF) @ Power Up, Duty Cycle Lower Limit, Upper Limit and Output Frequency

- 5.1.1 Default Output State: Display shows "ON" or "OFF" (SEE EXAMPLE 1)

- 5.1.2 Lower Limit Value: Display shows "L" and a 2 digit number. (SEE EXAMPLE 2)

Upper Limit Value: Display Shows "H" and a 2 digit number OR "100" (100%)

- 5.1.3 Output Frequency display in "F" and 2 digit number

- 5.2: Set Default Output State @ Power Up: Rotate Digital Pot clockwise or Counter Clockwise (ON/OFF will Alternate)

- 5.3: Increase Upper Duty Cycle Limit: Rotate Digital Pot clockwise

Decrease Upper Duty Cycle Limit: Rotate Digital Pot counterclockwise

- 5.4: Increase Lower Duty Cycle Limit: Rotate Digital Pot clockwise

Decrease Lower Duty Cycle Limit: Rotate Digital Pot counterclockwise

- 5.5: Set Frequency:

Increase Frequency: Rotate Digital Pot clockwise

Decrease Frequency: Rotate Digital Pot counterclockwise

- 5.6: Exit & Save/Return to Normal Mode: Long press Digital Pot until Display Changes (~5sec)

- 6: Connect load (SEE CONNECTION DIAGRAM)

Information including Drawings, Schematics, Links and Code (Software) Supplied or Referenced in this Document is supplied by MPJA inc. as a service to our customers and accuracy or usefulness is not guaranteed nor is it an Endorsement of any particular part, supplier or manufacturer. Use of information and suitability for any application is at users own discretion and user assumes all risk.

Information Subject to Change Without Notice
All rights are retained by the respective Owners/Author(s)



MARLIN P. JONES & ASSOC., INC.

P.O. Box 530400 Lake Park, FL 33403

800-652-6733 FAX 561-844-8764

WWW.MPJA.COM