

# 34111-BX

## Protective Case for 32184 "C" & 32764 "F" Thermostats

### Part Identification

**NOTE:** Actual Case Maybe Slightly Different

Identify all Parts

4 Short Screws & Nuts (For Board)

4 Plastic Spacers

4 Long Screws & Nuts

1 Base (8 Slots & 8 Holes)

1 Long Side Side NO Slot

1 Long Side with cutout for Terminal Strip

2 Short Ends

### Assembly

1: Peel off protective paper from plastic.

2: Place the 4 Short Screws through the Base.

Place the plastic spacers on the screws.

3: Place the PC Board in Case on top of spacers.

Attach the 4 Nuts on screws & tighten.

4: Place the Long Side with Cutout in slots in base with Cutout Next to Terminal Strip.

5: Place the 2 End pieces into the Base.

6: Place the remaining Long Side by the Display.

Now is where it gets tricky


7: Thread the Probe through the small rectangular Cutout in the Top.

Align Top over Probe Connector and Relay.

Manipulate the various pieces until all drop into the Notches in Top.

8: Place the Long Screws through the Base and up through Top.

Attach the 4 Nuts to Screws.

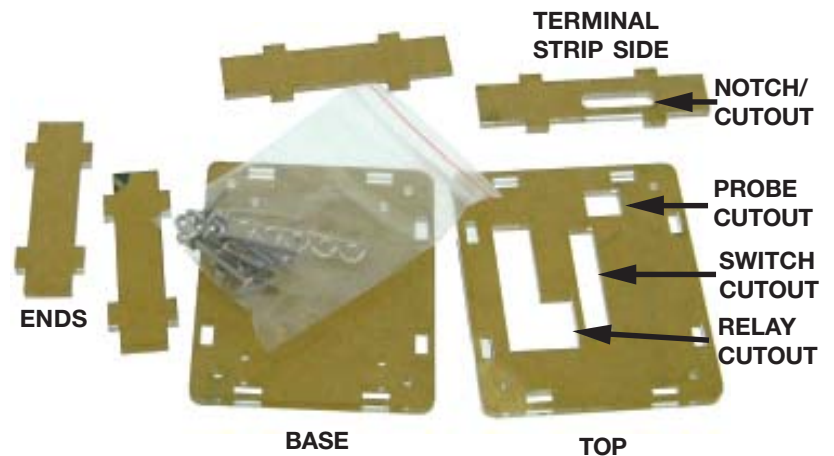

### Unassembled Case



**Temp. Controller NOT Included**



### Assembled Case

Information including Drawings, Schematics, Links and Code (Software) Supplied or Referenced in this Document is supplied by MPJA inc. as a service to our customers and accuracy or usefulness is not guaranteed nor is it an Endorsement of any particular part, supplier or manufacturer. Use of information and suitability for any application is at users own discretion and user assumes all risk.

Information Subject to Change Without Notice  
All rights are retained by the respective Owners/Author(s)



**MARLIN P. JONES & ASSOC., INC.**

P.O. Box 530400 Lake Park, FL 33403

800-652-6733 FAX 561-844-8764

WWW.MPJA.COM