



# MARLIN P. JONES & ASSOC., INC.

P.O. Box 530400 Lake Park, FL 33403

800-652-6733 FAX 561-844-8764

WWW.MPJA.COM

## 35700 BX

**Assembly:** Remove paper scratch cover. Starting with the back plate try both sides to see which works best with the USB jack. Use 4 screws from the outside of the back plate and attach them to the taller stand off. Mount clock to studs and use dual female stand offs to secure clock in place. Install side plate in slots (long plates top – bottom and short plates sides). With a little effort align face plate slots with the sides and use last 4 screws to secure face plate

### 4 Short Stand offs for the Face Plate



### 8 Screws




### 4 Taller Stand offs for the Back Plate




Helpful hint:  
USB connect is slightly off center try flipping the back plate if alignment is not correct.

Longer - Top and Bottom

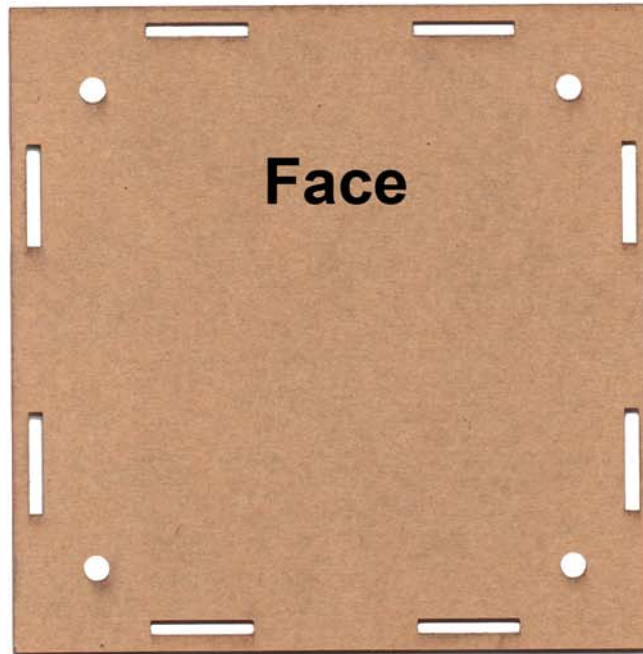

Face

Shorter - Sides

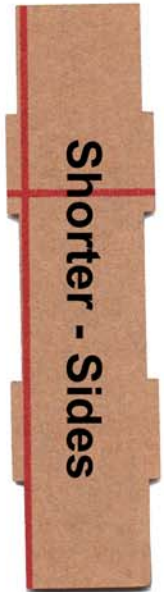

Buttons

Back

USB

Shorter - Sides



Longer - Top and Bottom

